


CARPET DUST COLLECTION PROTOCOL

- The dust collection attachment (see below) has stoppers in both ends. Remove the rear stopper and make sure collection basket is inside of the unit. Save the stopper.
- Attach to vacuum cleaner and remove the stopper from the front of the unit. Save the stopper.
- If the individual is experiencing allergenic reactions, pick the room they spend the most time in. A good selection would probably be the bedroom.
- Tape off an area approximately 2 ft². Vacuum the entire area inside the area selected.
- Check the collection basket to make sure that there is sufficient dust collected. If it is less than ½ filled, collect another 2 ft².
- Try to collect enough dust for at least a ½ full basket.
- Put the stopper back into the front part of the collection unit and detach unit from vacuum cleaner.
- Put the other stopper into the rear of the unit.
Place the unit into the return mail envelope and send to the lab.
- Results will be ready approximately 2 weeks from receipt of the unit in the lab.

front stopper

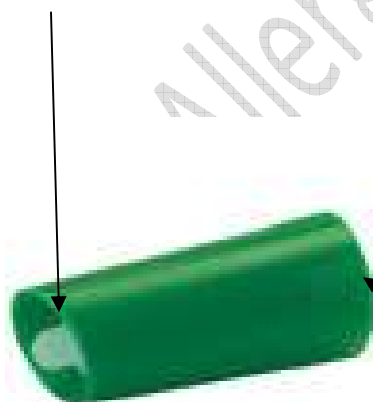

this end attaches to vacuum

rear stopper